

To switch from +3.3V to AREF, remove J1 (0R) from the "3.3" position, and place on the EXT section of BR1 (labeled as "AREF" on the pcb).

