



To match UNO default serial settings use `SWSERIAL_8N1`;

`SoftwareSerial softSerial(15,13); // RX=15, TX=13`
`softSerial.begin(9600); // defaults to SWSERIAL_8N1, 64 byte buffer,`

SerialComsPair_ESP8266

(c)2021 Forward Computing and Control Pty Ltd

www.forward.com.au